


Voxari Manual

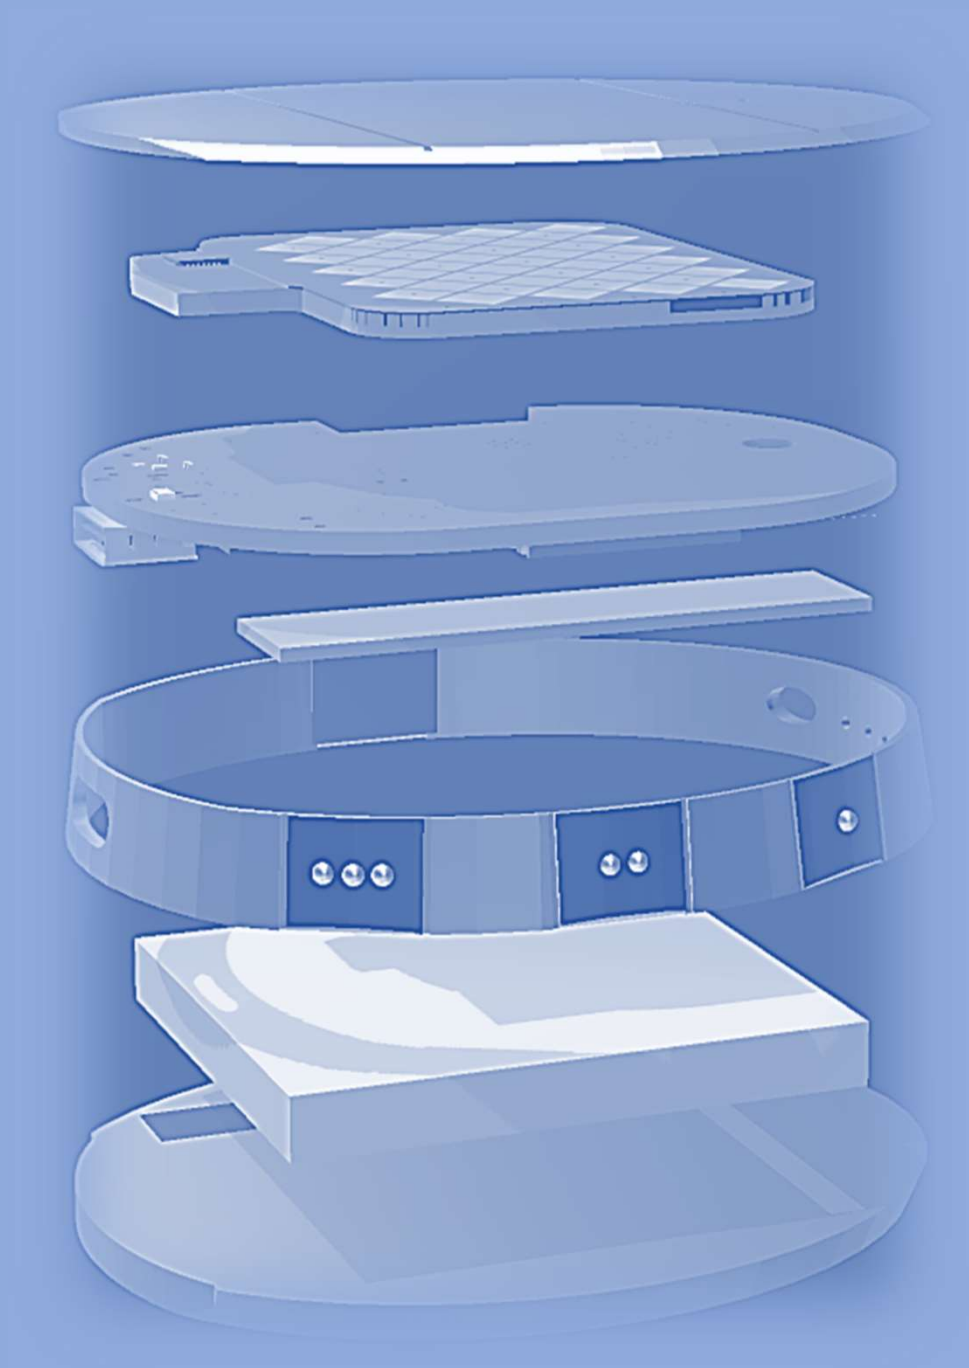


COMPACT

MOBILE

v0.2

OPEN-SOURCE

Exploded View:

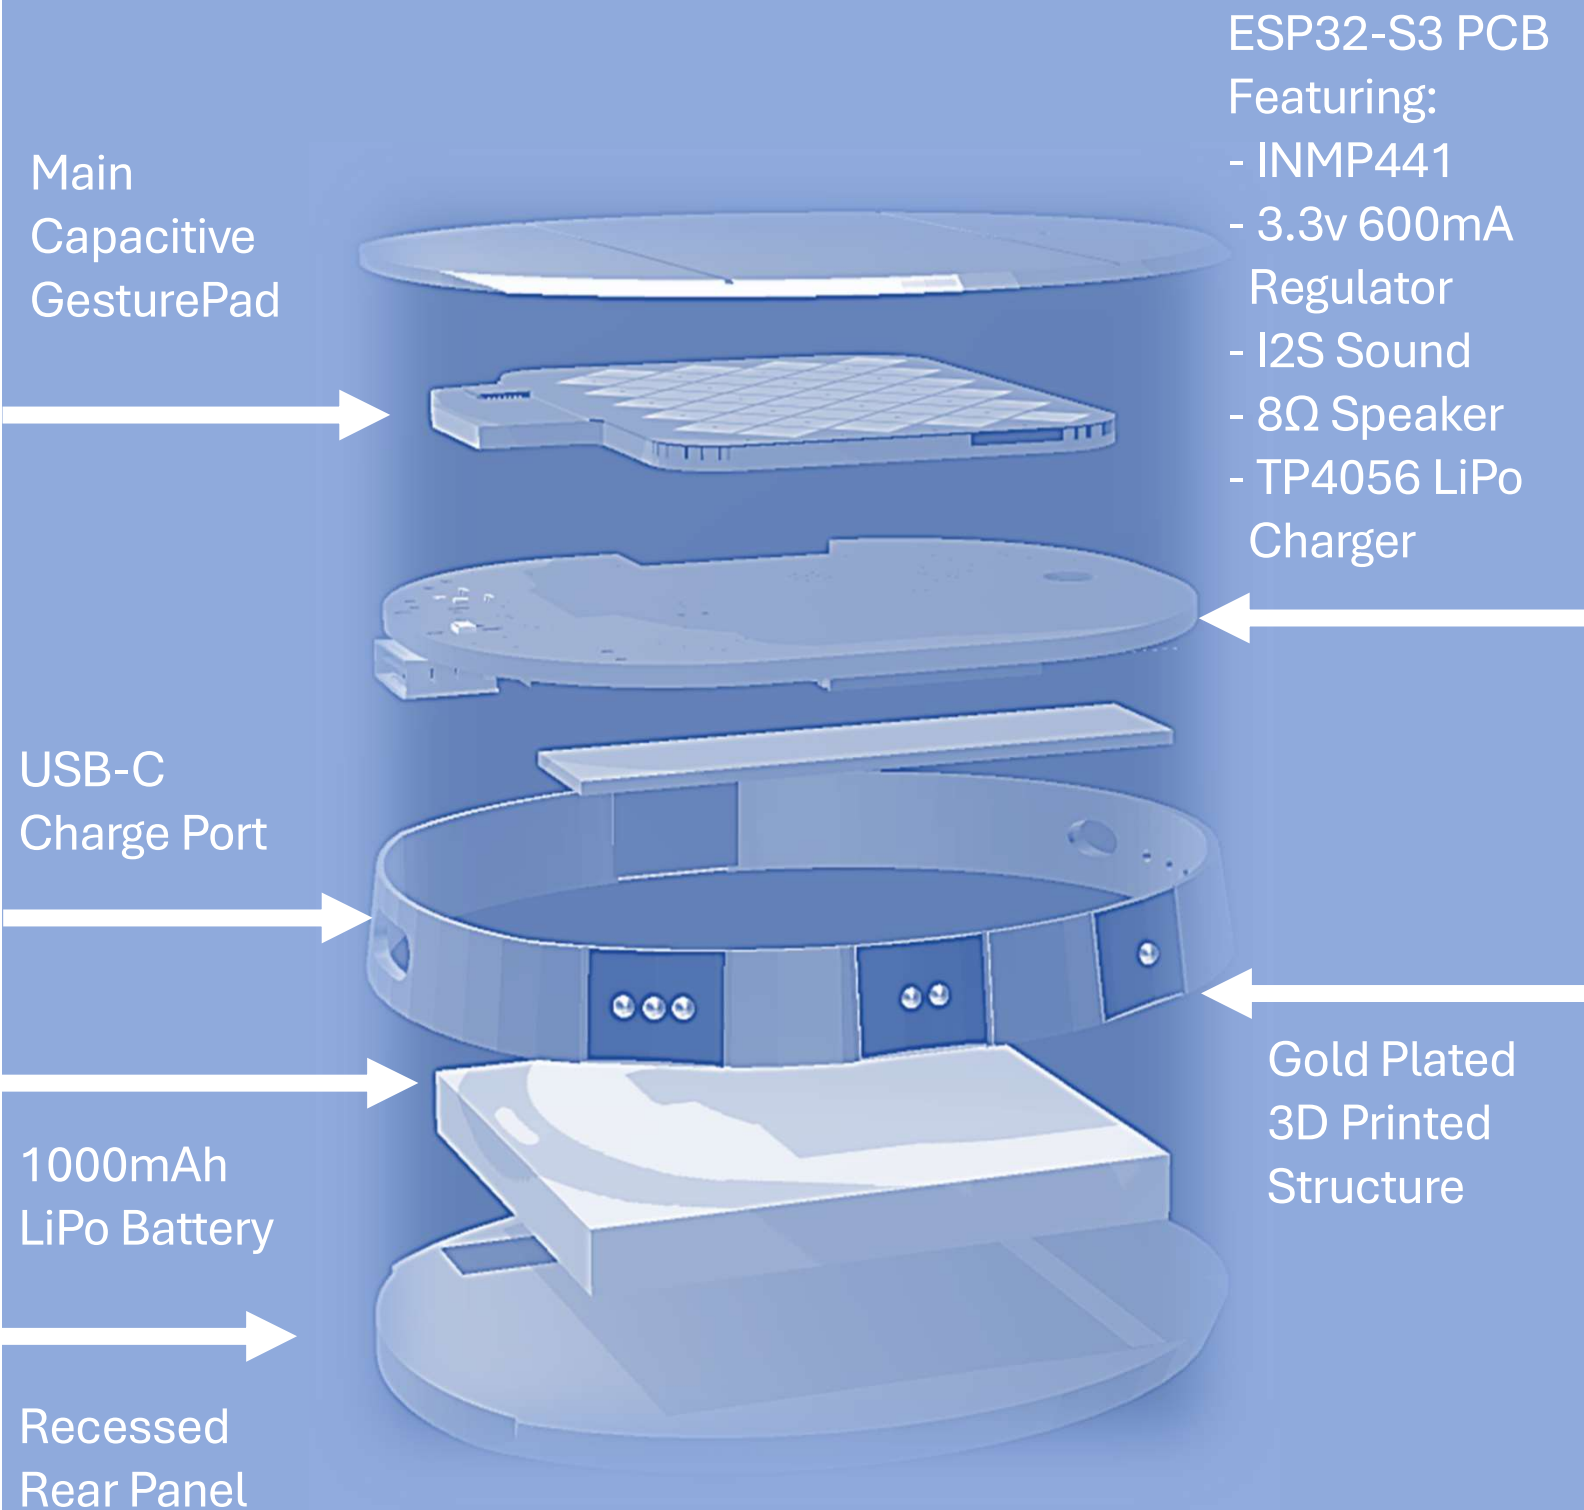

Interaction:

Microphone Input

Multi-Gesture TouchPad


Notification LED

Speaker Output

Secondary Capacitive Touch Pads


USB-C
Charging Port

** Visual Appearance may vary*

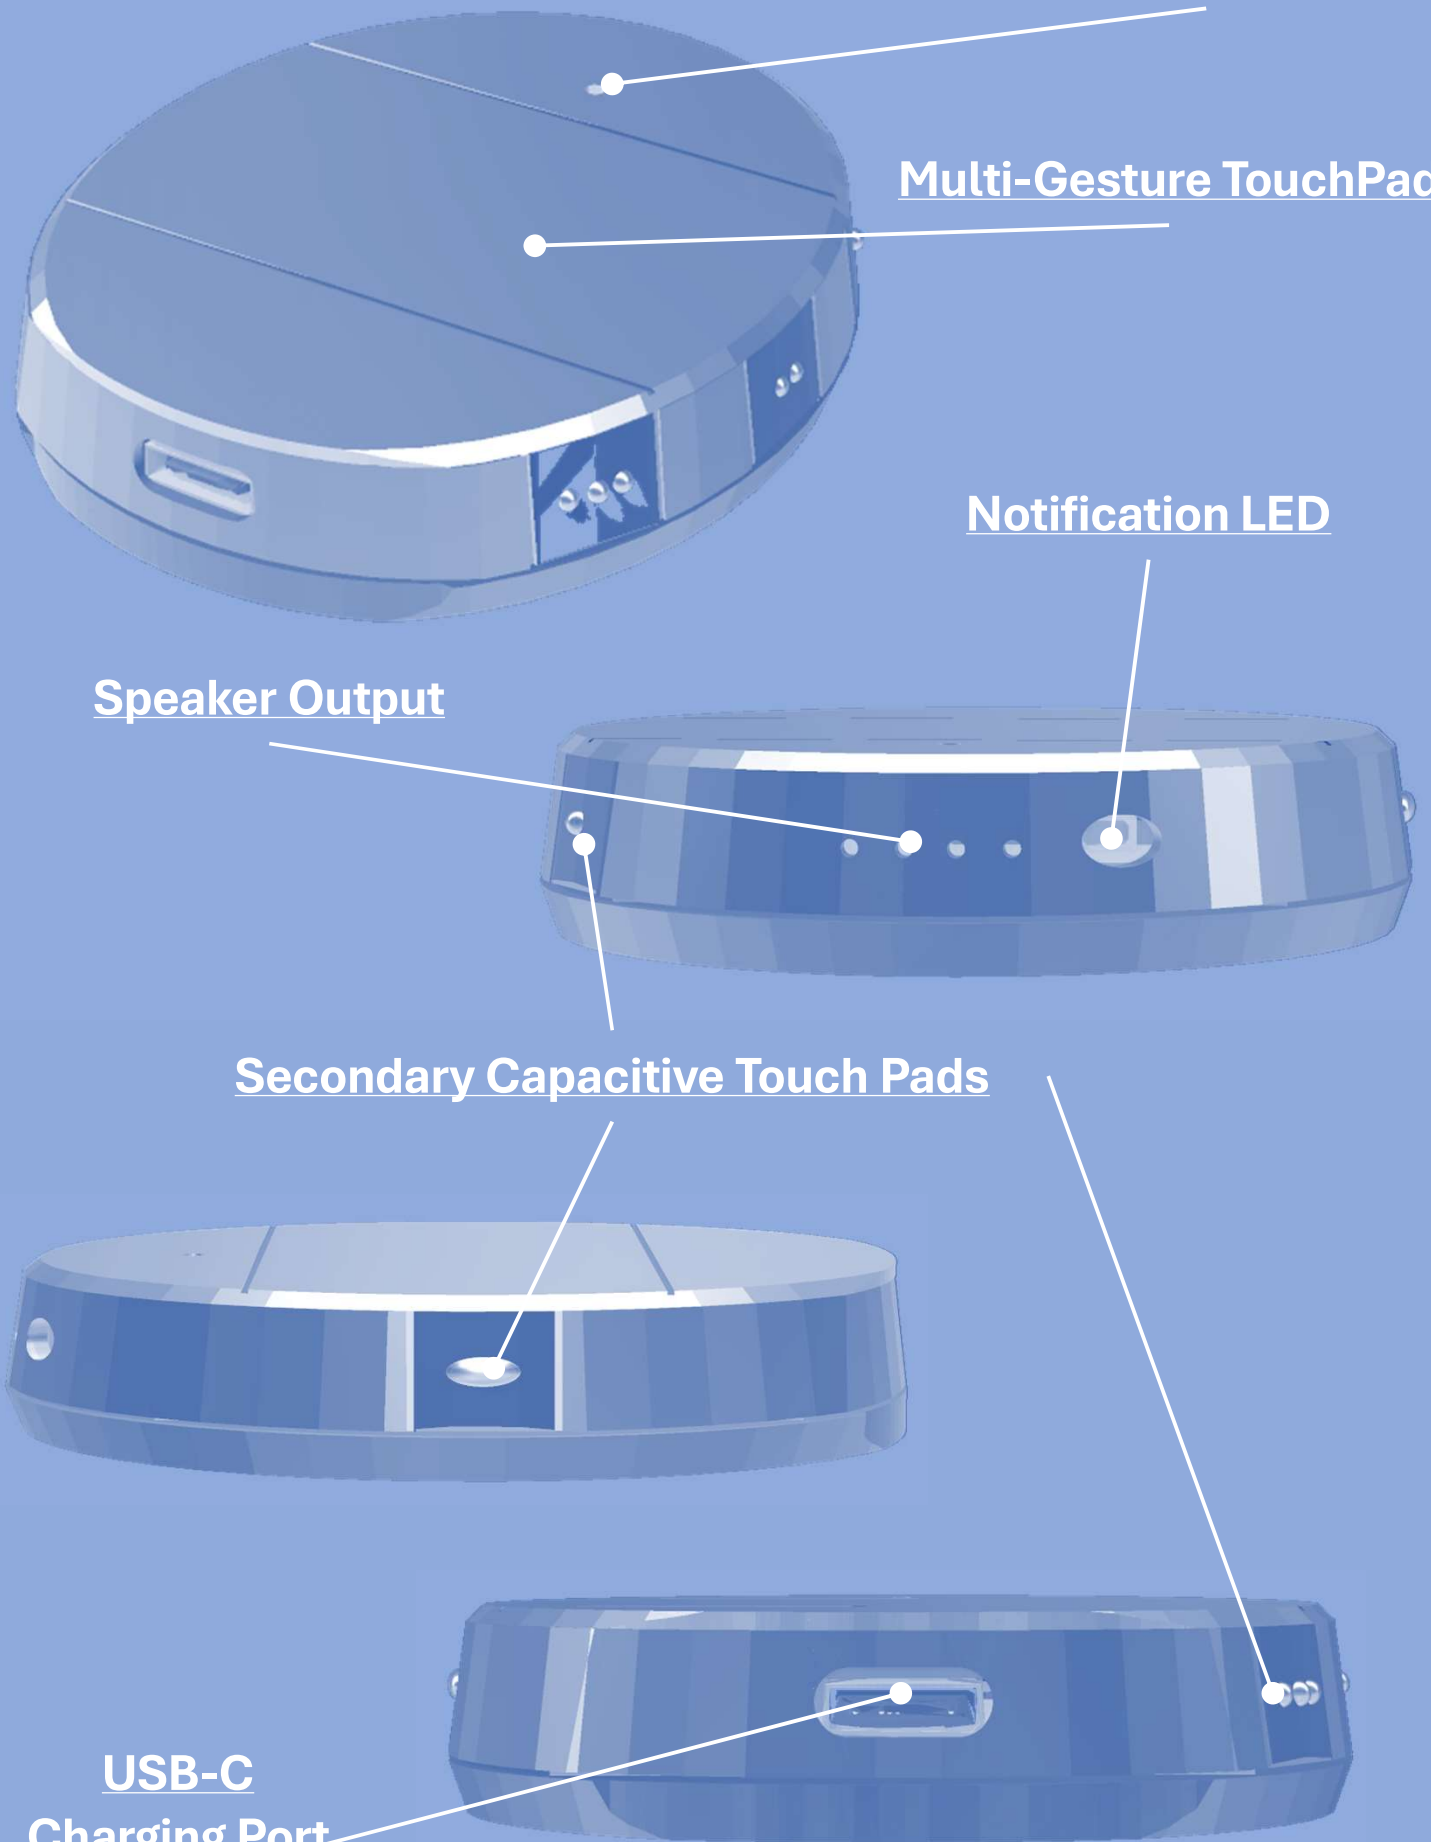

Secondary Touch Button Functions:

Button	Function
Middle Right	Function-Lock Key (SHIFT) Used to ensure no accidental activation of other buttons (HOLD to use)
Top Left	Contact Sharing Mode (See Gestures)
Middle Left	Mute
Bottom Left	On-Demand WIFI Configuration Access Point (Config-AP)

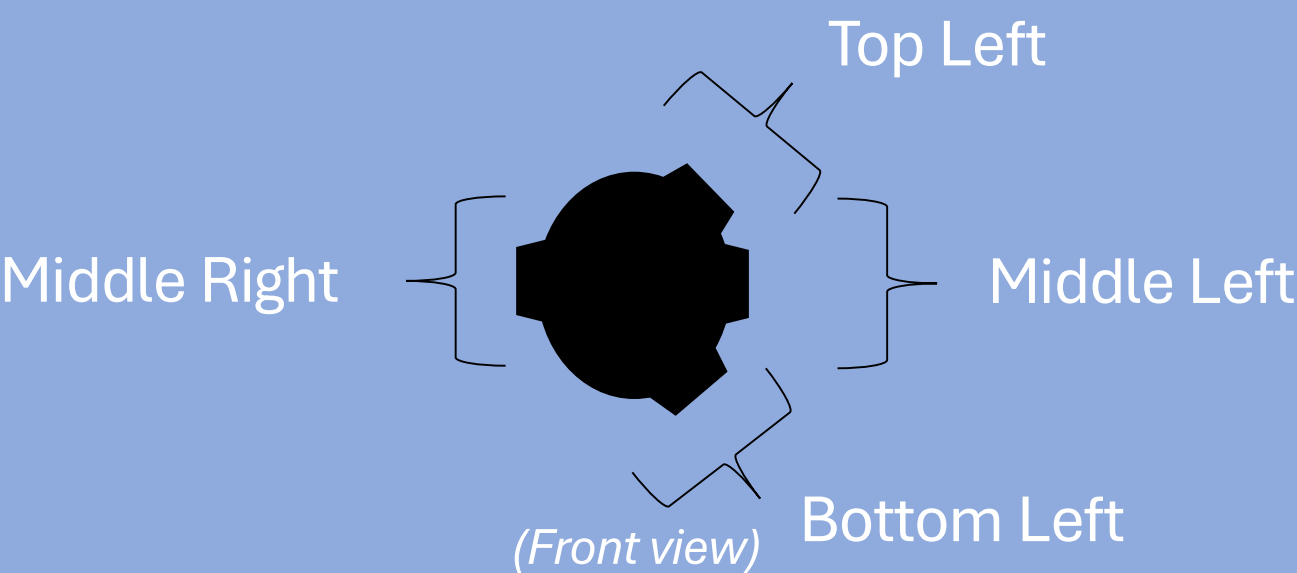

Commands & Functions:

After a **Tap** on the Main Capacitive GesturePad, counter of 5 seconds will begin, where **Listening mode** is active.

During **Listening Mode** speak one of the following to activate its function:

Command	Function
Call < NAME >	Calls Contact with matching name. AI hears command, sends request for Matching < BADGE-ID > from local Contacts list, Connects both Badges to a Private Channel.
Time, Date etc	AI hears command and Responds with requested information.
Add Contact (<i>Moved to Gesture with Chirp as method for sharing BadgeID</i>)	Adds new Local Contact. AI sends request for < NAME > of contact. Speak the name you will say to Call them. AI then requests < BADGE-ID >. Speak < BADGE-ID > (found in Wireless AP & rear of Badge). Both get saved to local Badge Storage.
Translate to < LANGUAGE >	AI begins recording, translates and plays back the translation.

** Not all features may be currently enabled*

Gestures:

A **Tap** on the **Main Gesture Pad** or **SHIFT** will wake up the ComBadge from sleep.

The Following **Gestures** are available while awake:

Gesture	Function
Swipe Up	Contact Sharing (Send Mode): Send BadgeID via <i>Chirp</i> to Receiving Badge in <i>Receive Mode</i> . Normal Mode: Volume Up
Swipe Down	Contact Sharing (Receive Mode): Receive BadgeID via <i>Chirp</i> & Create New Contact → Speak <Name> Normal Mode: Volume Down
Swipe Left	WiFi Toggle
Swipe Right	LoRa Toggle
Tap	Waking Tap: Wakes up the ComBadge from sleep and activates <i>Listening Mode</i> <i>Tapping while Awake</i> has no function.
Double Tap	Already Awake: <i>Deactivates Listening Mode</i> or <i>Closes Current Call</i>